


MAKE: LANDROVER **TYPE:**
MODEL: Series II, IIA, III **YEAR:** 1958 – 1984
DETAIL: L.W.B. Pickup & Station Wagon, Santana 109
 S.W.B. Santana 88 **LAND-51**

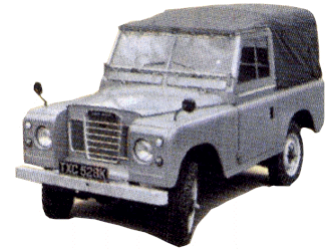

FRONT		TYPE	QTY	PART NUMBER
<p>LEAF SPRING Type 'A'</p> <p>9 Leaves Raised Height (40mm Lift)</p>		A A	1 1	LAND-9L-F RH LAND-9L-F LH
<p>SHACKLE BUSH KIT Rubber Polyurethane Metal</p> <p>'A' Type 'B' 'C'</p> <p>S.W.B. Series II, IIA, III L.W.B. Series II, IIA</p> <p>Kit Contains: 4 x SPF2154 2 x SPF2212</p>		B	1	PB51-1029K
<p>1973 on, Series III, L.W.B. Only</p> <p>Kit Contains: 4 x SPF2154 2 x SPF2155</p>		B	1	PB51-1081K
<p>U-BOLT KIT</p> <p>Type 'A' 'B' 'D'</p> <p>Series II, IIA Right Hand Side Kit Contains: 1 x UB51-601-1 1 x UB51-901</p> <p>Left Hand Side Kit Contains: 2 x UB51-601-1</p> <p>Series III Right Hand Side Kit Contains: 2 x UB51-903</p> <p>Left Hand Side Kit Contains: 1 x UB51-902 1 x UB51-903</p>		A D A D A D	1 1 1 1	UB51-901K UB51-601-1K UB51-903K UB51-902K
<p>SHOCK ABSORBER</p> <p>Heavy Duty Gas</p> <p>Type 'A' 'B' 'C'</p>		A	2	GS51-090
<p>STEERING DAMPER</p> <p>Type 'A'</p> <p>Heavy Duty (Big Bore) Complete with Fittings</p>		A	1	SD51-811

REAR		TYPE	QTY	PART NUMBER
<p>LEAF SPRING Type 'A'</p> <p>Suits S.W.B. 11 Leaves Raised Height (45mm Lift)</p> <p>Suits L.W.B. 8 Leaves Raised Height (45mm Lift)</p>		A A A A	1 1 1 1	LAND-SWB-R RH LAND-SWB-R LH LAND-8L-R RH LAND-8L-R LH
<p>SHACKLE BUSH KIT Rubber Polyurethane Metal</p> <p>'A' Type 'B' 'C'</p> <p>Kit Contains: 6 x SPF2154</p>		B	1	PB51-1030K
<p>U-BOLT KIT</p> <p>Type 'A' 'B' 'C'</p> <p>Series II, IIA Kit Contains: 2 x UB51-601-1</p> <p>Series III Kit Contains: 2 x UB51-904</p>		A A	2 2	UB51-601-1K UB51-904K
<p>SHOCK ABSORBER</p> <p>Type 'A' 'B' 'C'</p> <p>Suits S.W.B. (L.W.B. Pre 1958) Heavy Duty Gas</p> <p>Suits L.W.B. (1958 on) Heavy Duty Gas</p>		A C	2 2	GS51-015C GS59-631